
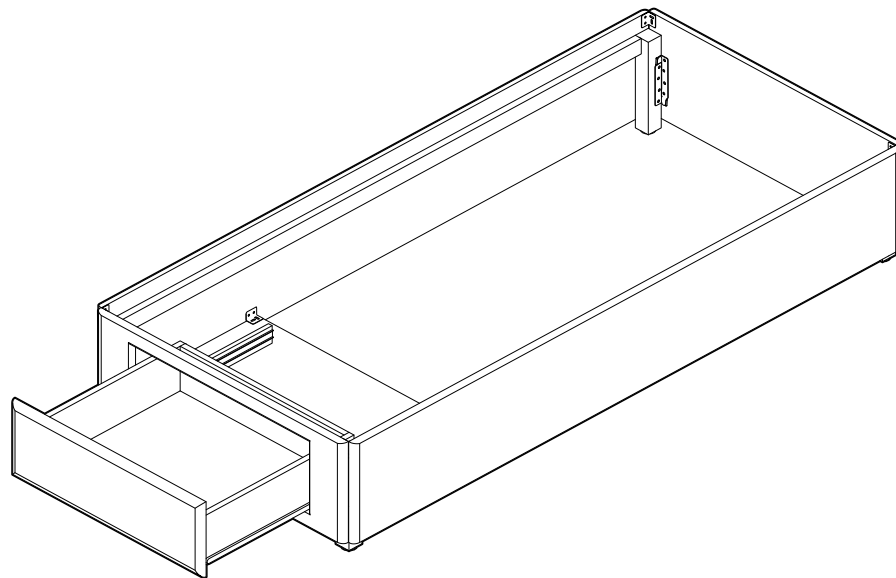
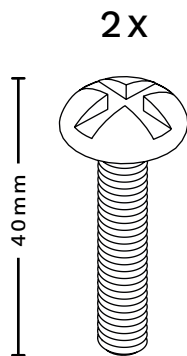



# **DRAWER UNIT GUIDE**


*(OPTIONAL EXTRA)*

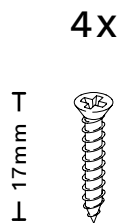



**\*NOTE DOUBLE QUANTITY FOR TWIN DRAWERS**


INSTALLATION GUIDE \*NOT TO SCALE

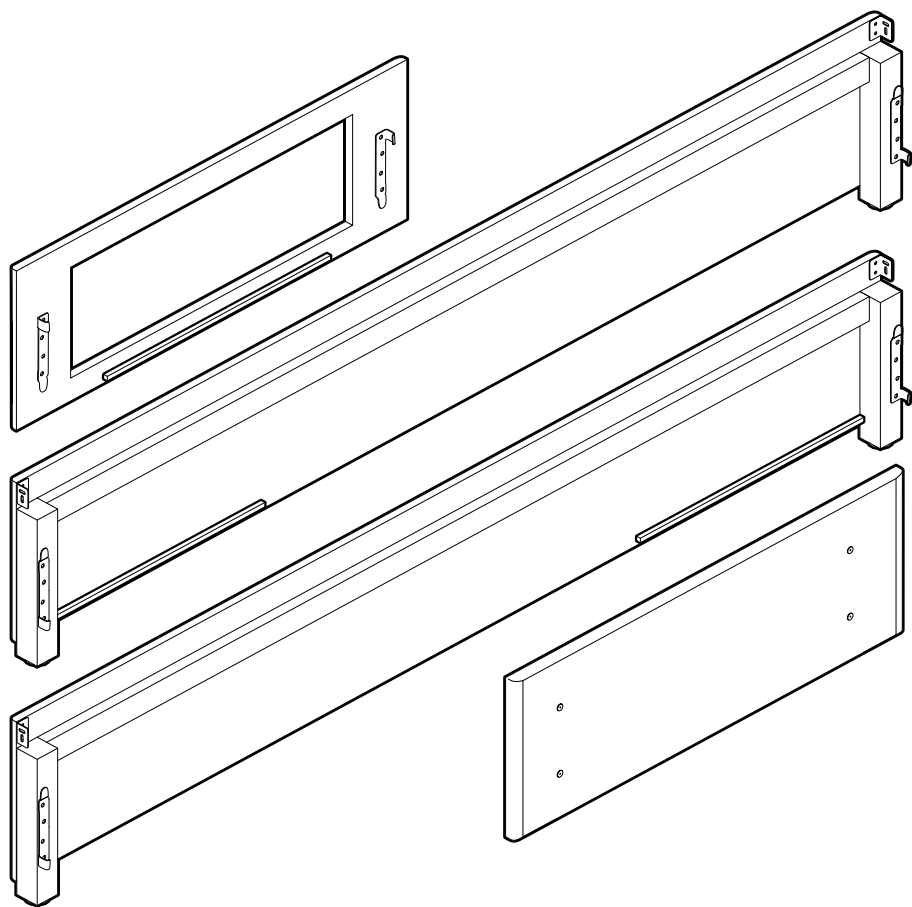


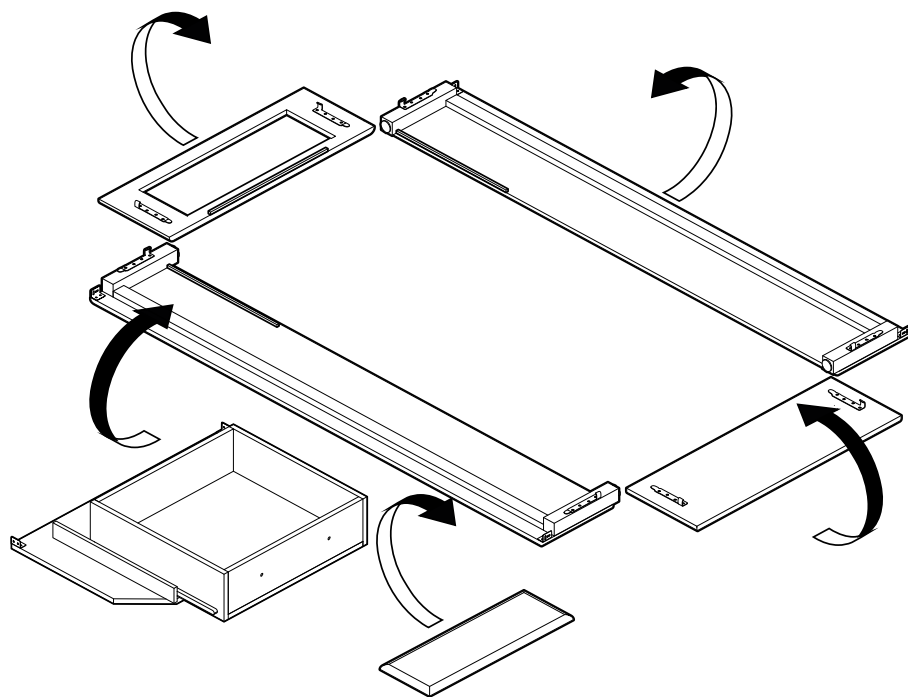

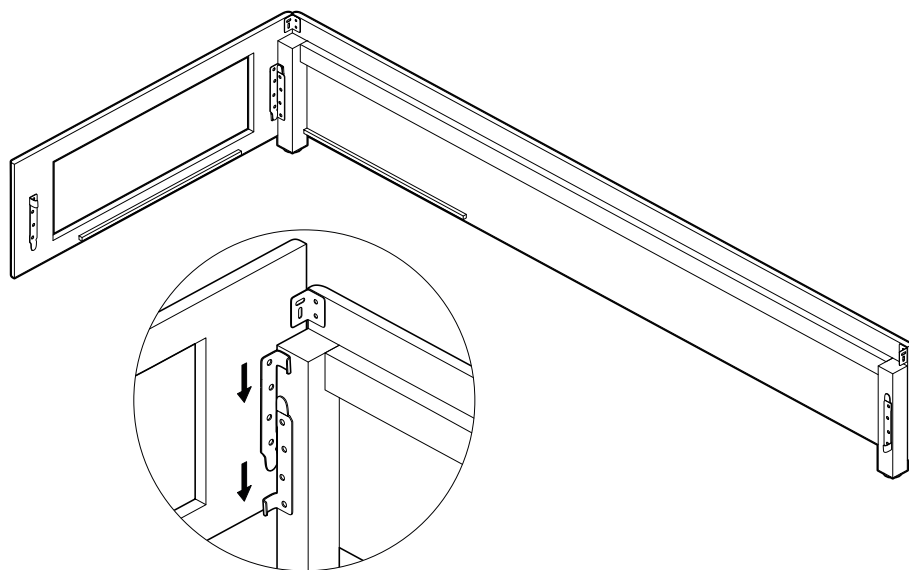


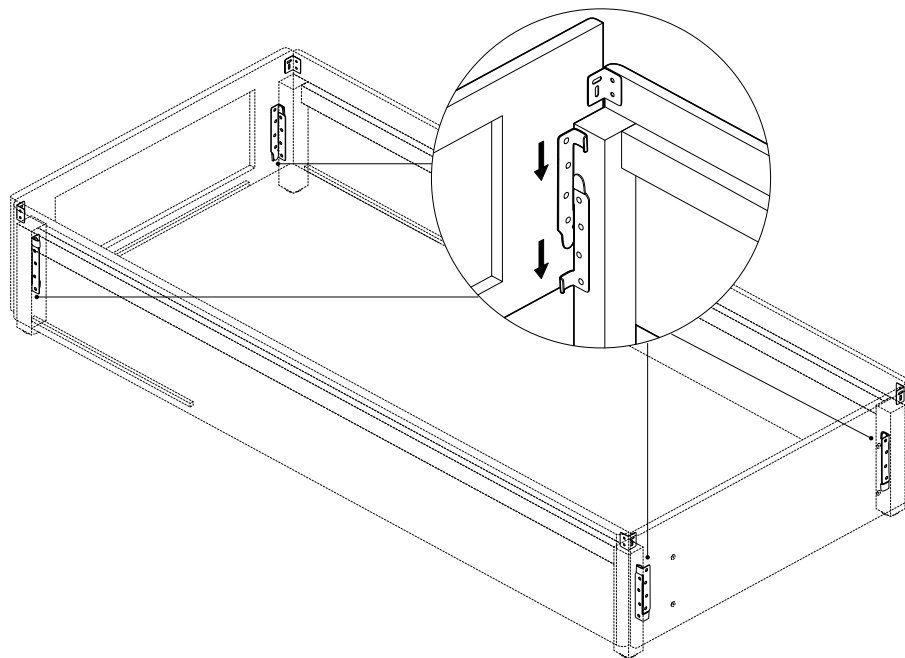


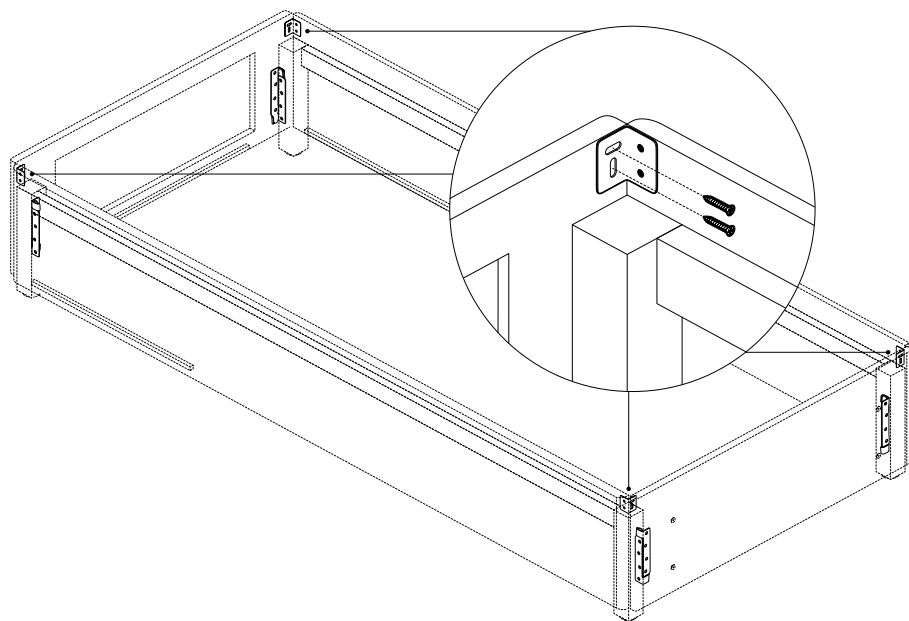


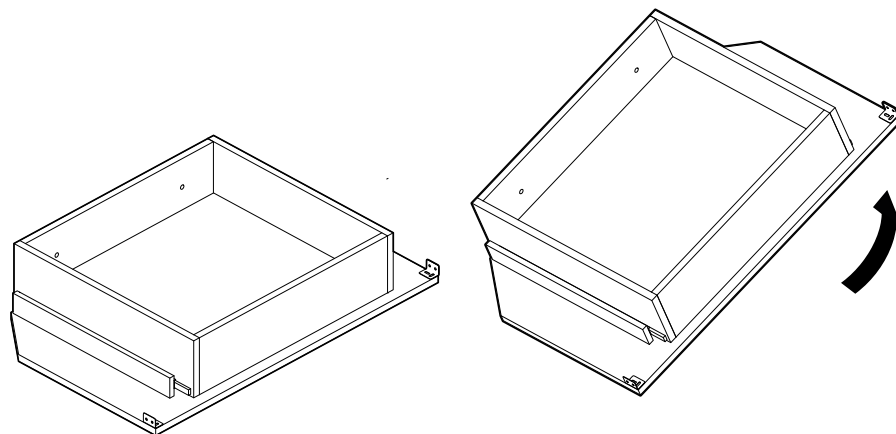




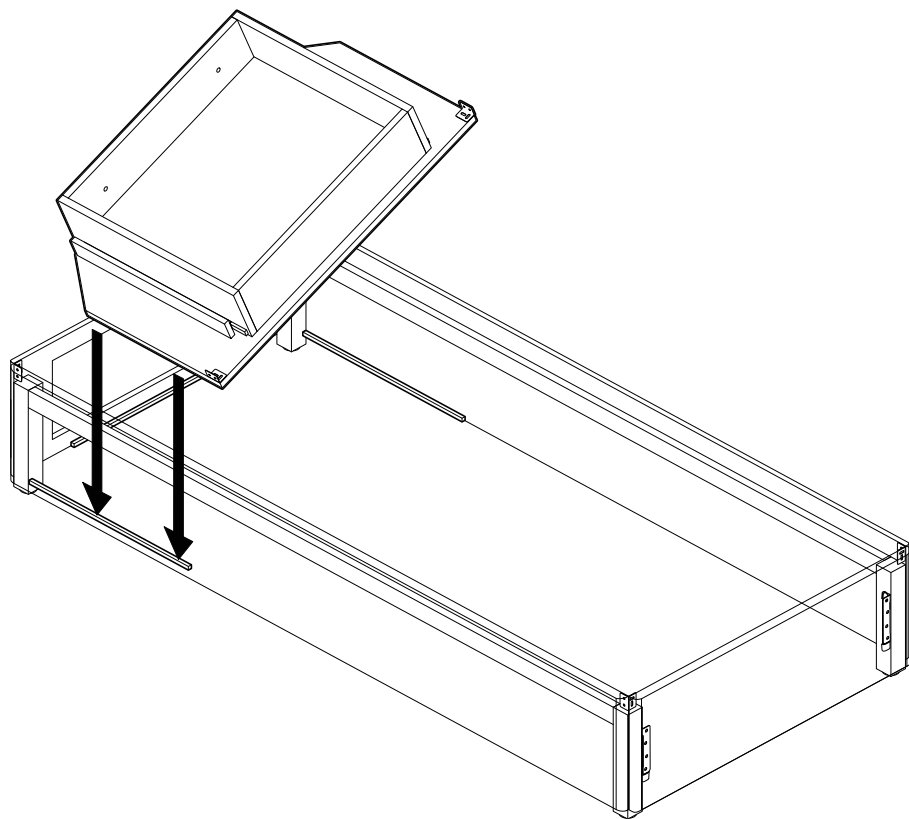


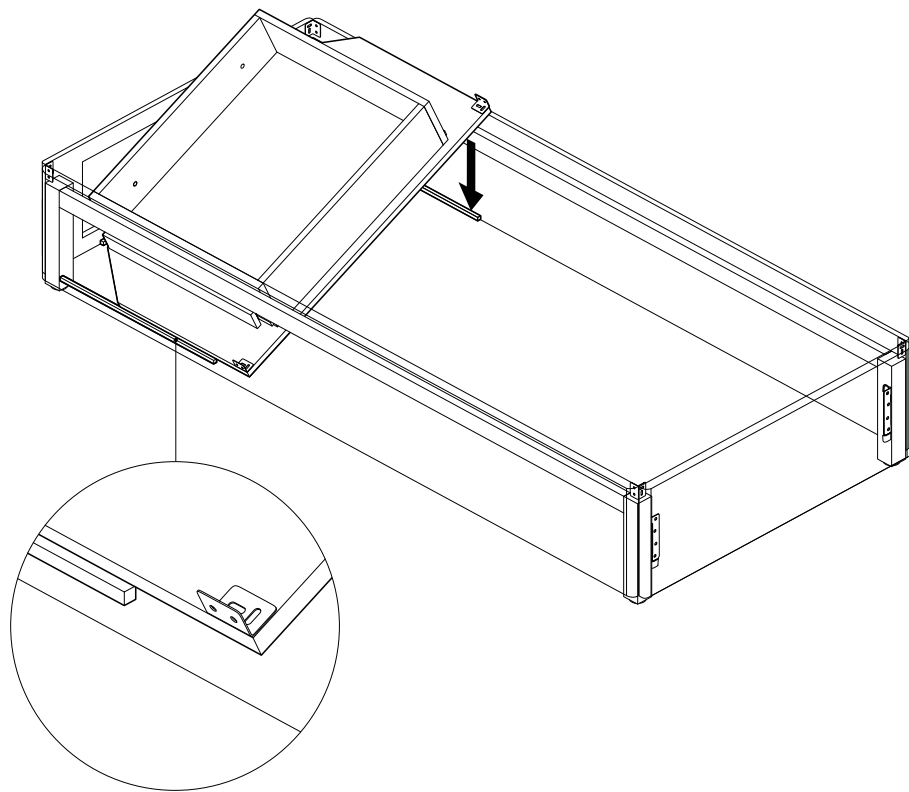


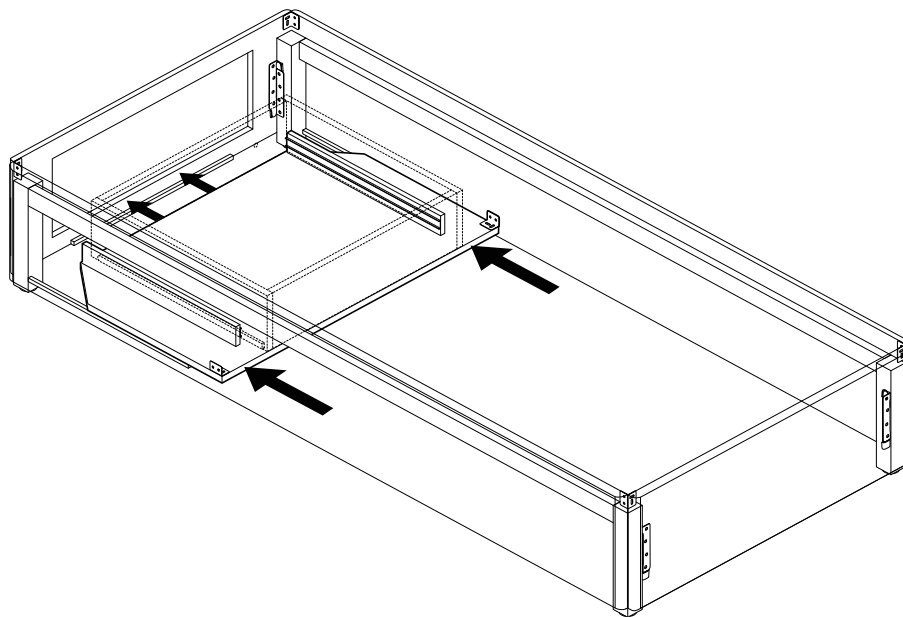

ENSURE THE BASE PANEL SITS ABOVE THE FOOT END SUPORT BATTEN AND HARD UP AGAINST THE FOOT END PANEL.IF THERE IS A GAP ON EITHER SIDE, CHECK THE BASE CORNERS ARE SQUARE (SEE PAGE 12)

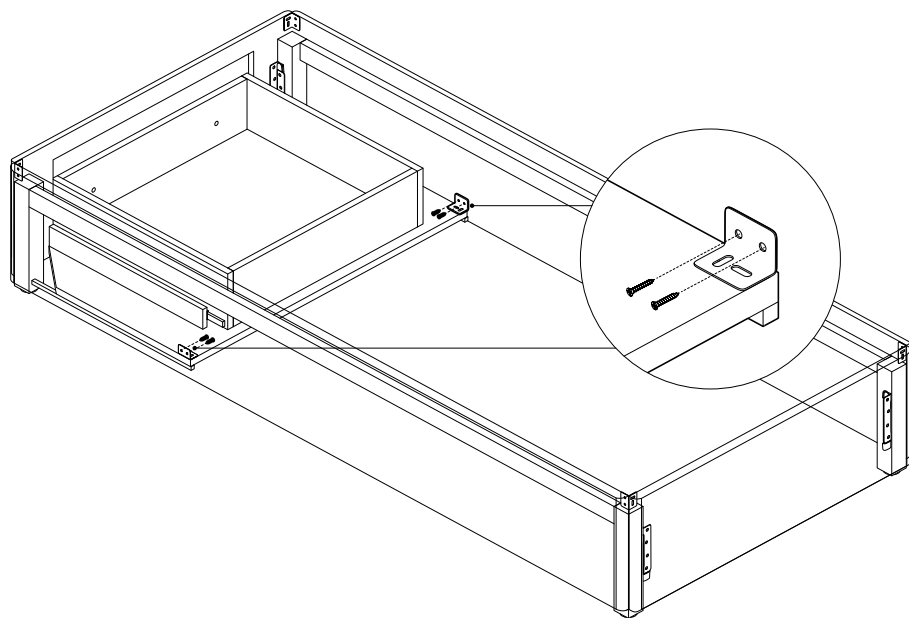

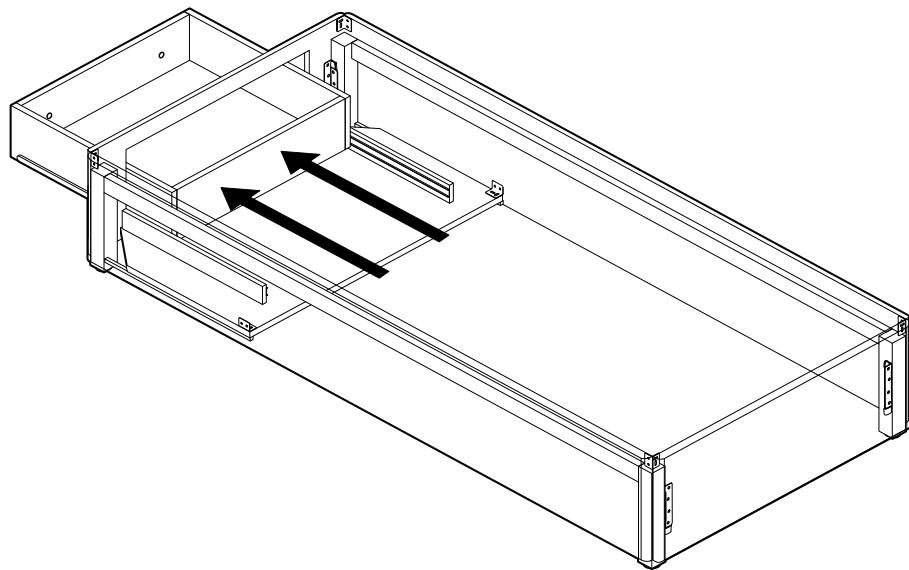

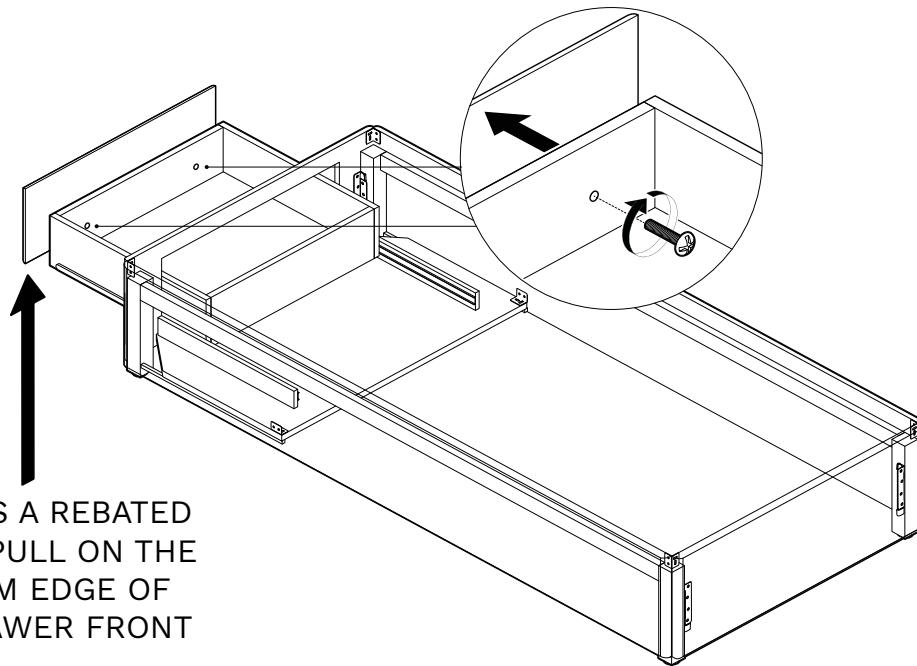

THERE IS A REBATED  
FINGER PULL ON THE  
BOTTOM EDGE OF  
THE DRAWER FRONT

023 9298 4042



**email:** [admin@backcarebeds.co.uk](mailto:admin@backcarebeds.co.uk)



**website:** [backcarebeds.co.uk](http://backcarebeds.co.uk)