




INDIVIDUAL BASE GUIDE


T
17mm




8x

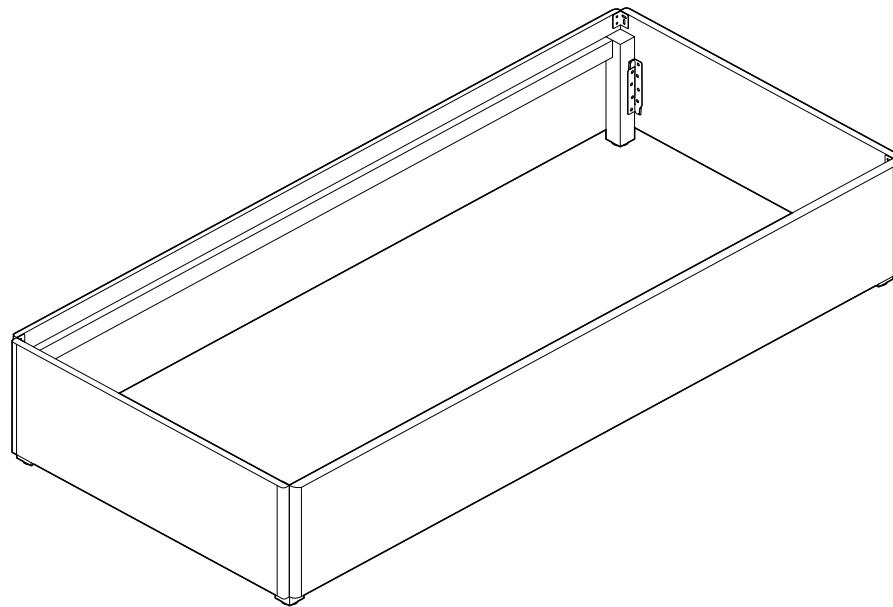


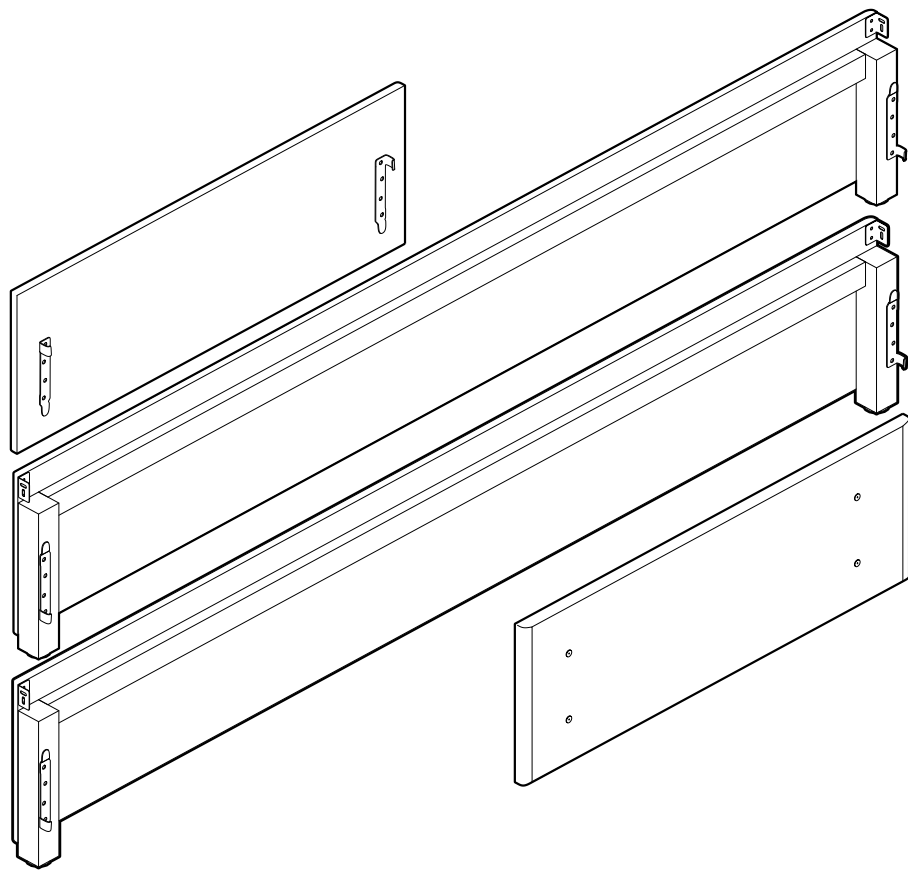

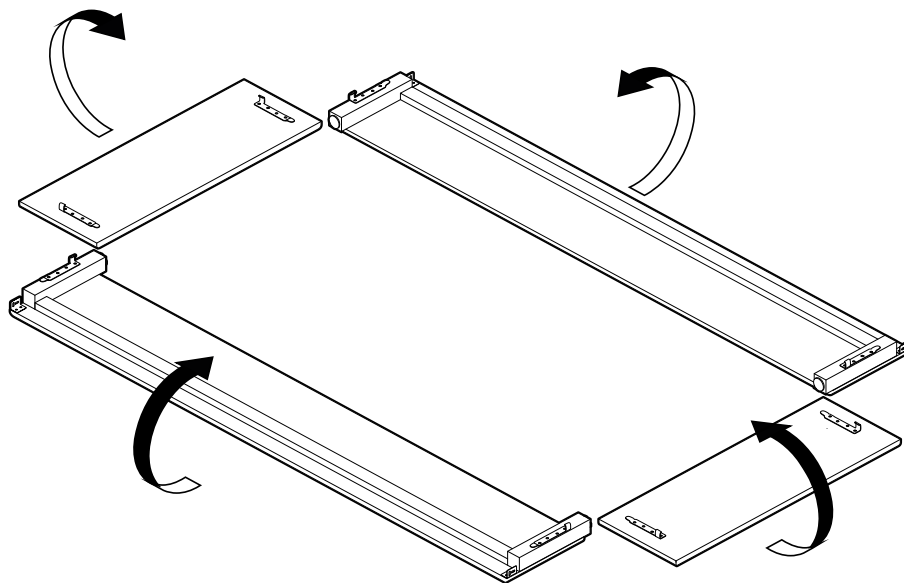


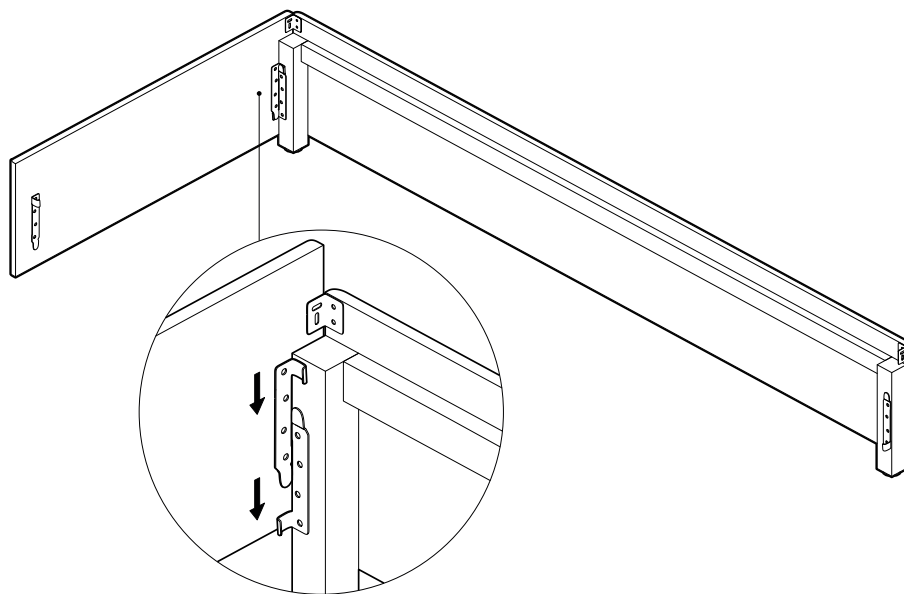


ALIGN INTERLOCKING BRACKETS AND PUSH DOWN

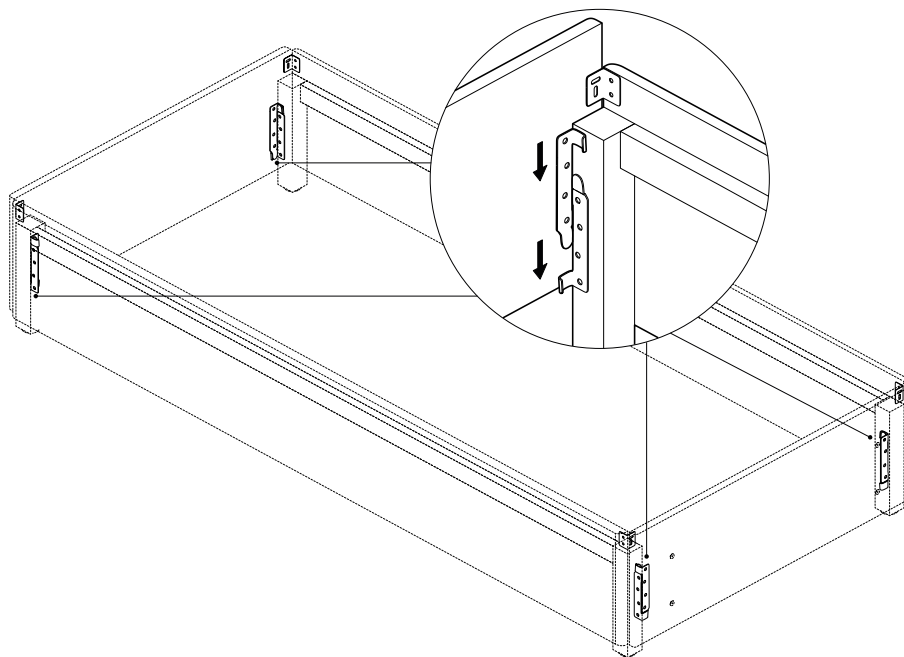


IF THE TONGUE OF ANY OF THE INTERLOCKING BRACKETS HAVE BECOME BENT, IT MAY BE NECESSARY TO USE A FLAT SCREWDRIVER TO LEVER IT OPEN TO ALLOW A GOOD FIT

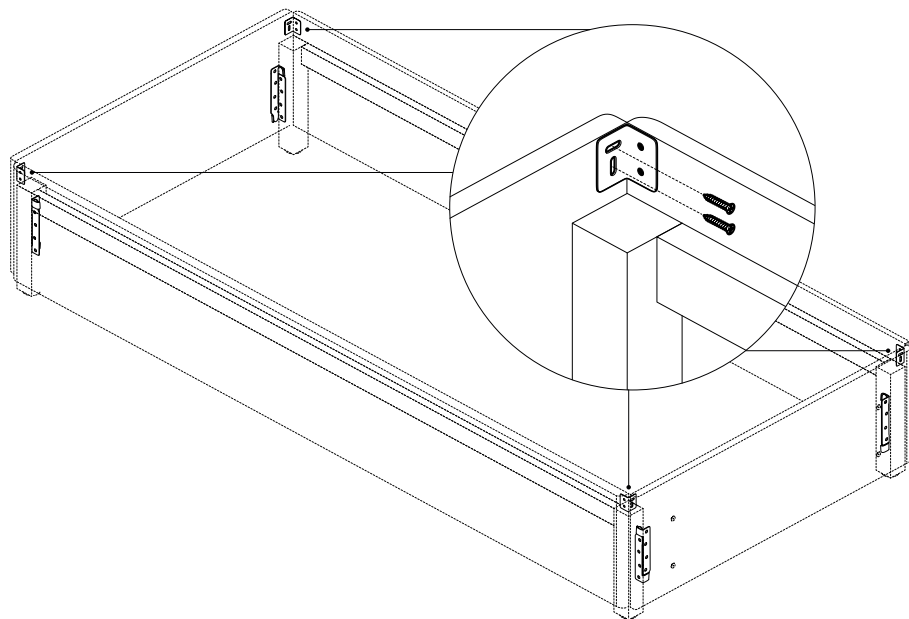

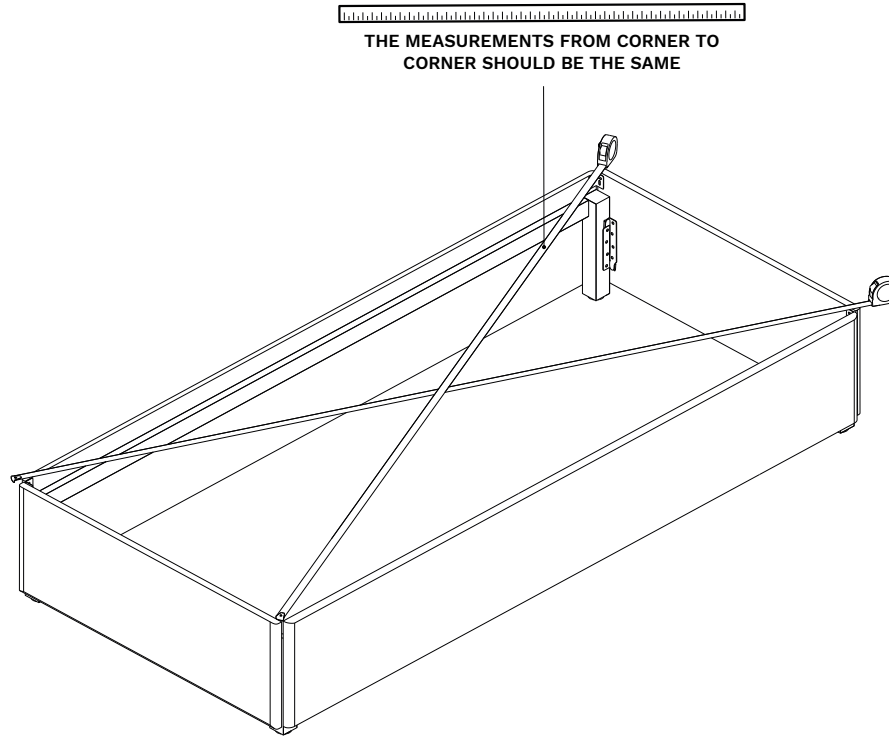

TO ENSURE THE CORNER ANGLES ARE EQUAL, THE DIMENSIONS FROM CORNER TO CORNER SHOULD BE THE SAME. IF THEY ARE NOT, DRAWERS AND MECHANISMS WILL NOT FIT CORRECTLY.

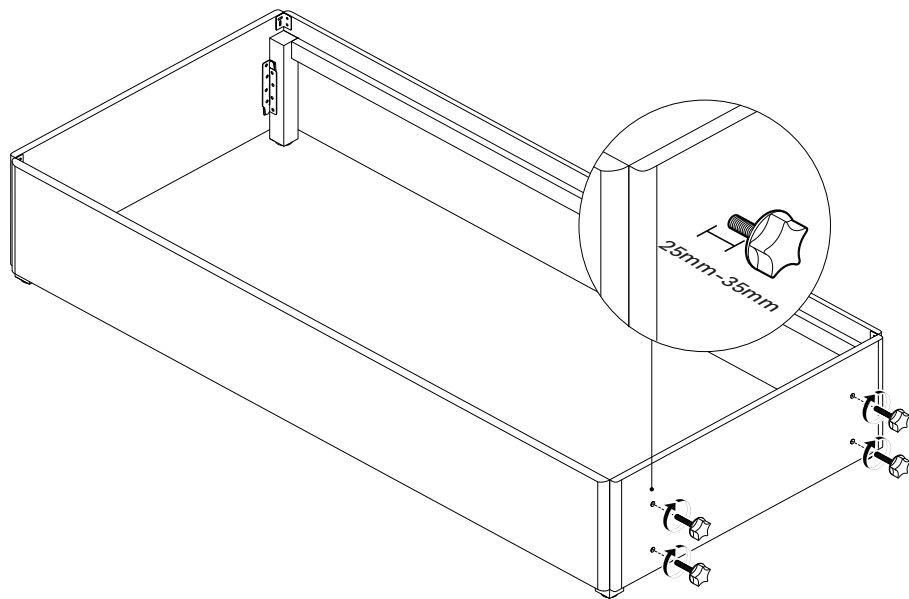

023 9298 4042



email: admin@backcarebeds.co.uk



website: backcarebeds.co.uk