


Fitting Headboards

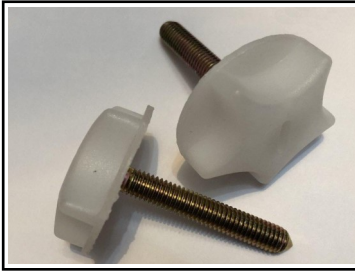

Each Headboard requires;
4 of the Headboard bolts

These will be found in a small bag packed with the motor.

This guide is for fitting headboard options;

1A, & 1B

2A, 2B & 2C


3A, 3B & 3D

See Separate guide for options 3C & 4A

1 Lay the headboard face down.

Using a large cross head screwdriver, remove the two bottom bolts and nylon washers.

Loosen the top two bolts and rotate the Headboard struts vertical.

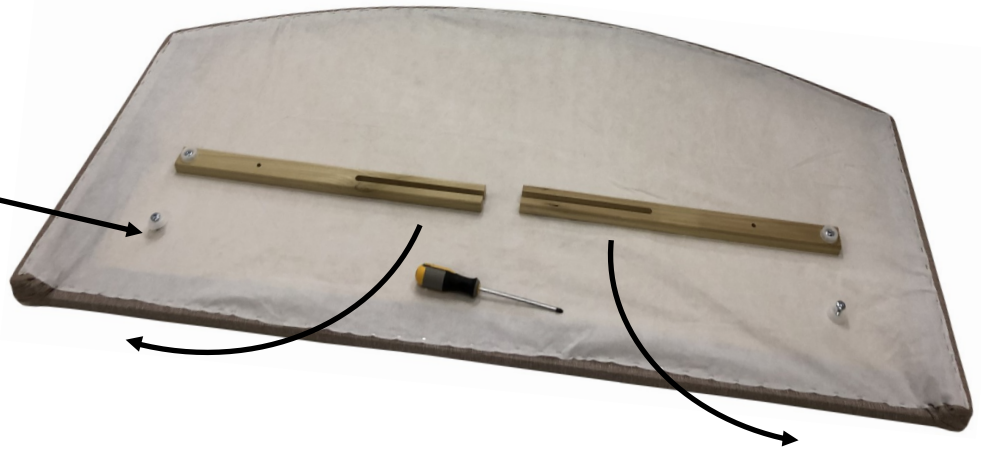

2 Re-insert the two bolts with nylon washers through the headboard struts.

Note, Do not fully tighten the bolts. This will allow a little movement when positioning over the bolts on the back of the base.



3

By hand, screw the four bolts (supplied) into the 4 threaded holes marked with sticky labels. (Remove labels first)

Leave the Nylon head protruding by approximately 25 –30mm to allow the

20–30mm



4 Preferably with one person at each end of the headboard, lift and slip the headboard struts over the bolts



5

By hand, tighten the four bolts into the base. Tighten the four screws into the headboard.

